

LSH Garden

LSH ModulBox


Assembly Instructions


Package contents and required position numbers for assembly:

Pos.num	LSH Garden	D	H	L	Qty
	ModulBox	cm	cm	cm	
1	Board	2,0	14,6	96,0	2
2	Board	2,0	14,6	76,0	2
3	Post	6,0	6,0	14,6	4
4	Extension Post	4,0	6,0	14,6	2
5	Board	2,0	14,6	38,0	2
6	Corner Connector Plate 20x20x50x1 mm				8
7	Countersunk Screw 3.5x35 mm (for corner connector)				32
8	Countersunk Screw 4x80 mm				20

Assembly Steps:

1. Attach the longer boards (1) to the posts (3) using screws (8) in the pre-drilled holes.
2. Attach the shorter boards (2) to the posts (3), which are already assembled with the longer boards, using screws (8) in the pre-drilled holes.
3. Secure the corner connector plates (6) to the lower and upper parts of the inner corner joints using screws (7).

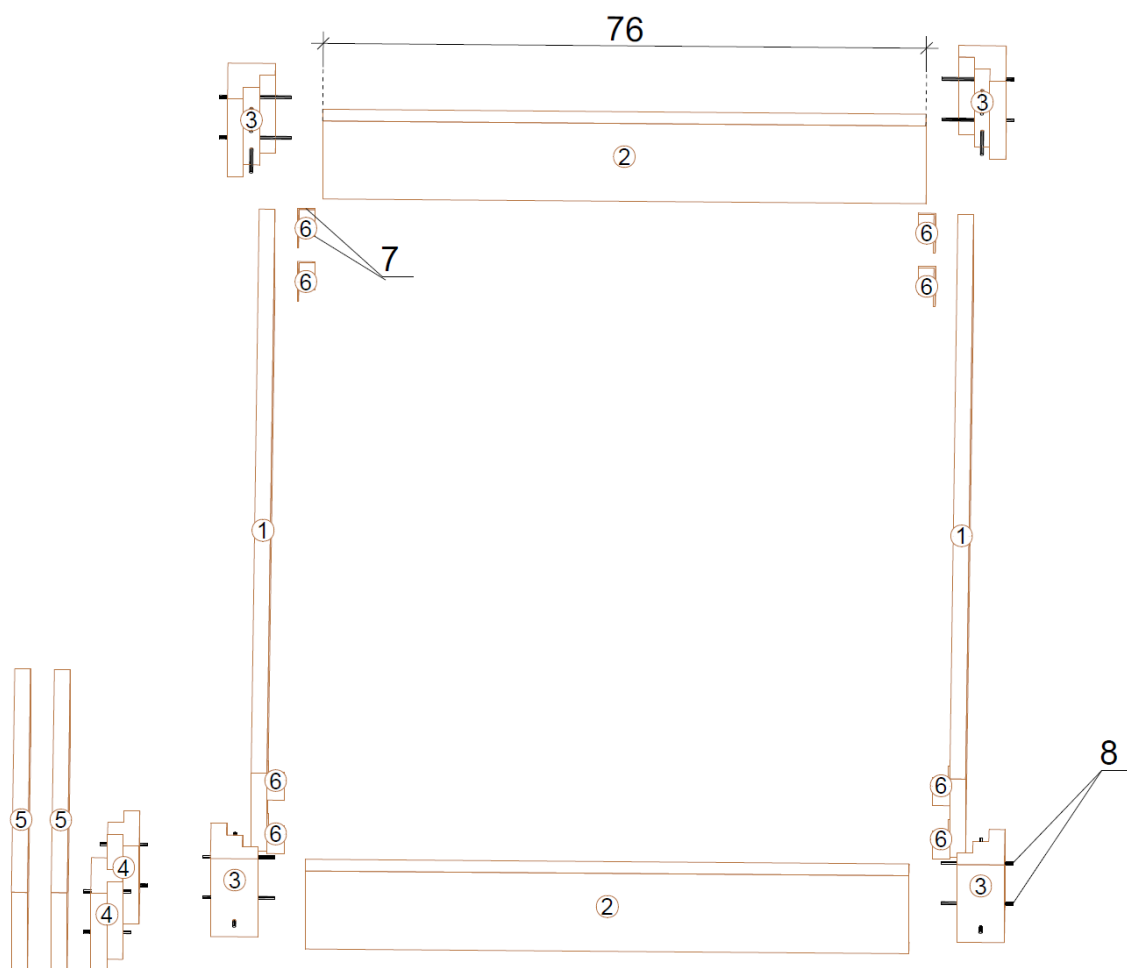

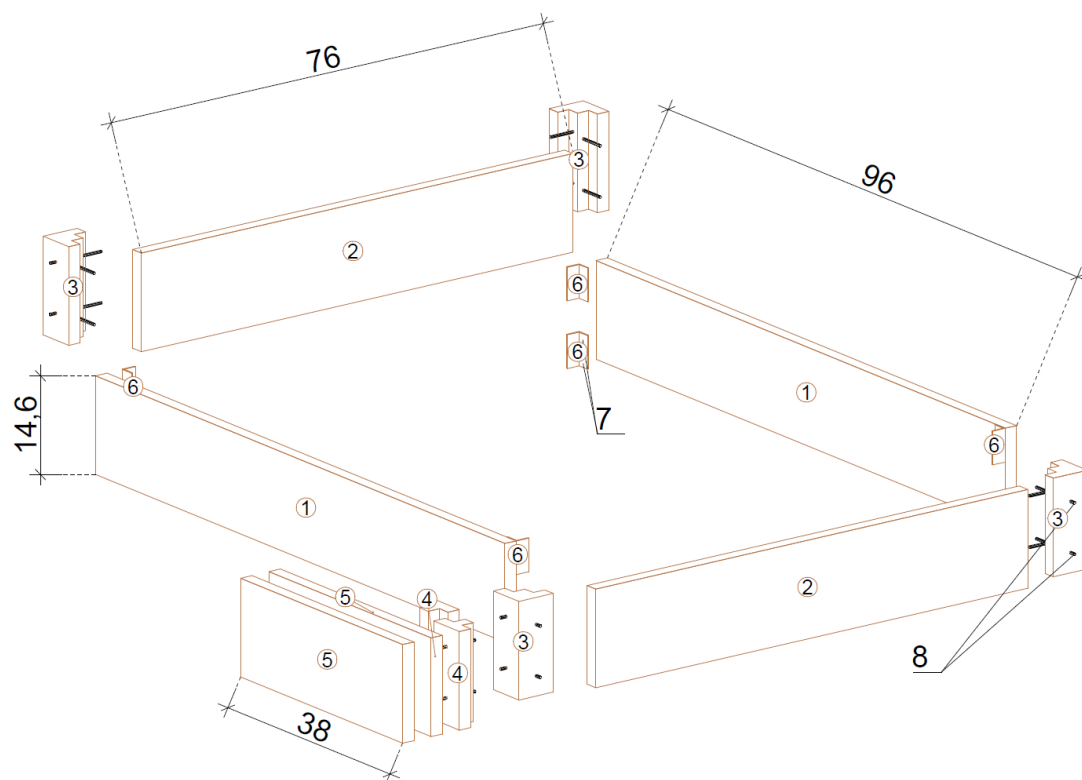


Additional Options and Visual Aids:


The package also includes two shorter, pre-drilled boards (5).

These can replace the standard shorter boards (2) in the basic assembly, allowing the ModulBox raised bed to be built in multiple widths.

Basic Construction:

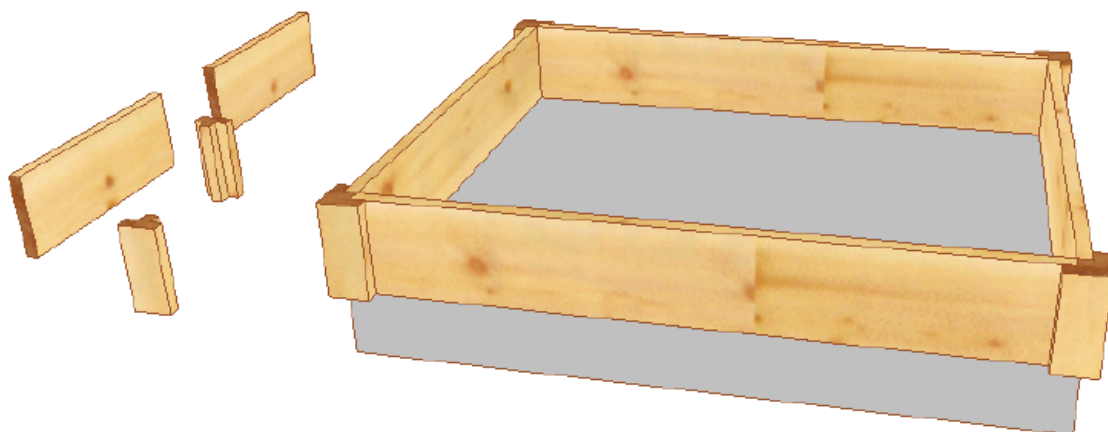

Alternative Construction:

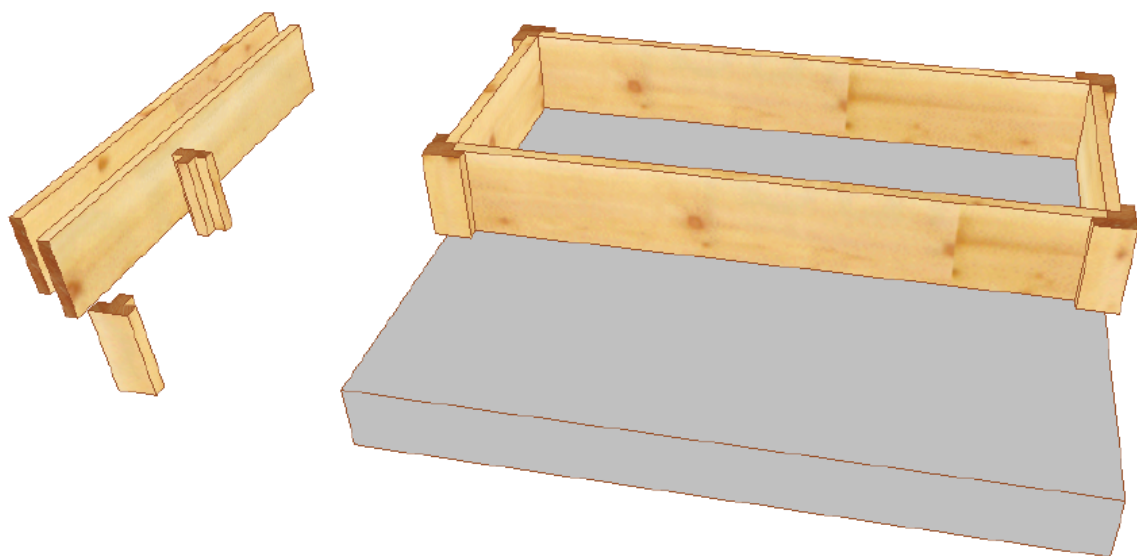

Exploded Diagrams:

